



# COFFEE

CENTRAL

SINCE 2013

## Contents

Safety instructions .....	4
Machine – overview / items included .....	8
Start-up .....	9
Preparing beverages .....	10
Programming the cup capacity .....	11
Inserting the water filter (not included) .....	12
Cleaning the machine .....	13
Descaling the machine .....	18
Frequently asked questions .....	20
Specifications .....	22
Service .....	22
Evaporating the residual water .....	23
Disposal instructions .....	23

# Safety Instructions

## Symbols and warnings



The warning triangle is used in the instructions where risks can result to the user or the machine when the safety instructions are not followed.



Warning: Danger of scalding



Prohibited: Do not reach into machine.



Prohibited: Do not drink.



Recommended action

**If you fail to comply with the operating instructions and safety instructions, the machine may become dangerous to operate. Please retain the operating instructions and pass them on with the machine if it is given to third parties.**

Do not start the machine if it is damaged or if it does not work properly. In that case, immediately remove the plug from the mains socket and contact the Service Hotline.

The machine is designed and manufactured for domestic use. The manufacturer assumes no liability for consequences arising from commercial use, use not in compliance with its intended purpose or non-compliance with the operating manual. This machine is intended to make hot drinks as stipulated in the operating instructions.

This machine is intended for indoor domestic use only. It is not suitable for commercial or industrial use.

The machine may only be used for its intended purpose.

In case of long periods of absence, vacation etc., the machine must be emptied, cleaned and the mains plug must be removed from the socket.

## Safety instructions (continued)

If there is risk of frost, all residual water must be removed, see the section on "Evaporating the residual water" on page 23.

The mains voltage must match the specifications on the nameplate. Only connect the machine to a grounded 3-pin wall socket. In the case of incorrect connection your warranty rights may be forfeited.

Do not damage the mains cord by placing it on or near hot objects or over sharp edges. Do not allow the mains cord to hang down (risk of tripping). Do not touch the mains cord with wet hands. Do not remove the plug from the socket by pulling on the cable. If the mains cord shows signs of damage, do not start the machine.

If the mains cable of the machine is damaged, it must be replaced by the manufacturer, his company customer service or a similarly qualified person in order to avoid any hazards.

Do not place the machine on a hot surface (e.g. cooker) or operate it next to heat sources or fires. Do not allow the machine to stand on its mains cable.

Always place the machine on a stable, flat and water-repellent surface.

For health reasons, only fill the water tank with fresh drinking water.

### **How to avoid injuries and scalds when using the machine.**

Do not leave the machine unattended during beverage preparation.

This machine is not intended for use by persons (including children) with reduced physical, sensory or mental abilities or who lack experience and knowledge.

Cleaning or servicing the machine that is normally carried out by the user must not be carried out by children.

The machine and its main cord must be kept out of the reach of children. Children may not play with the machine.

## Safety instructions (continued)

Never open the lever on the machine during brewing, rinsing, cleaning or descaling processes. When a process has been completed and the lever is then opened, never hold your fingers under the spout - there is a risk of scalding from remaining hot liquid dripping from the spout. When the brewing process has been completed, slowly open the lever in order to eject the capsule; do not bend over the capsule insertion opening (risk of hot liquid spraying).

Never reach with your fingers into the capsule insertion opening - risk of injury!

Do not use the machine without drip tray or drip grating. Do not overfill the water tank. Never lift the machine by its lever.

Store the machine and all its accessories out of reach of children.

Never open the machine or insert objects into the machine openings.

In order to avoid any hazards, any work beyond the normal use of the machine,

its cleaning, descaling and maintenance, such as repairs or replacing the mains cord may only be carried out by a customer service provider authorised by the manufacturer.

Before cleaning the exterior of the machine, unplug the mains cord and allow the machine to cool down. Do not clean the machine, the mains cord or the mains plug with water and do not immerse the machine in water.

Do not clean the machine under running water. Never put the machine or its parts into a dishwasher.

Refer to the instructions for use of all cleaning and descaling agents before use and comply with the safety regulations.

Never use a damaged or deformed capsule. Only use drink capsules marked with the K-fee® system logo that are intended for the machine.

## Safety instructions (continued)

### Capsules to be used.



claims may be forfeited.

The manufacturer and his distribution partner cannot be held liable for any injury or damage which is the direct or indirect result of non-genuine capsules being used with this machine.

**Only use genuine K-fee® system capsules. Look for the red K-fee® system logo and the characteristic fluted shape of the capsules.**

Using non-genuine capsules involves the following risks:

#### **1. Health hazards**

When using non-genuine capsules, differences in brewing process and capsule design may cause hot water to escape under high pressure - risk of scalding!

#### **2. Damage to the machine and warranty**

When using non-genuine capsules, differences in brewing process and capsule design will cause damage to the machine, which means that any warranty

These operating instructions are also available to download from our website:  
[www.k-fee-system.com](http://www.k-fee-system.com)

# Machine - overview / items included

- 1 Drip grating
- 2 Spent capsule container
- 3 Controls
- 4 Capsule insertion opening
- 5 Lever
- 6 Water tank
- 7 Water filter (optional, not included with this unit)
- 8 Spout
- 9 Height-adjustable drip tray



**Risk of scalding!** The machine produces very hot water (for brewing, descaling, cleaning and rinsing). In order to prevent scalding and other injuries always ensure that the lever is fully closed when the machine is running. Do not reach under the spout and do not remove the drip tray while machine is running.

## Light signals



Button lights up: READY, button can be pressed.



Button flashing: please wait. The machine is either heating up, dispensing a drink or rinsing.



On/Off button




Small cup



Large cup



Milk/rinse button

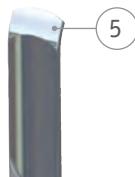


## CAUTION

Four pointed needles open the capsule in the machine. Do not reach into the capsule insertion opening in order to avoid injuries.



In addition to the parts depicted here, the items included on delivery comprise this original operating manual and a Quick Start Guide. Before putting the machine into operation, please verify the delivery for completeness (water filters are not included in the items supplied).

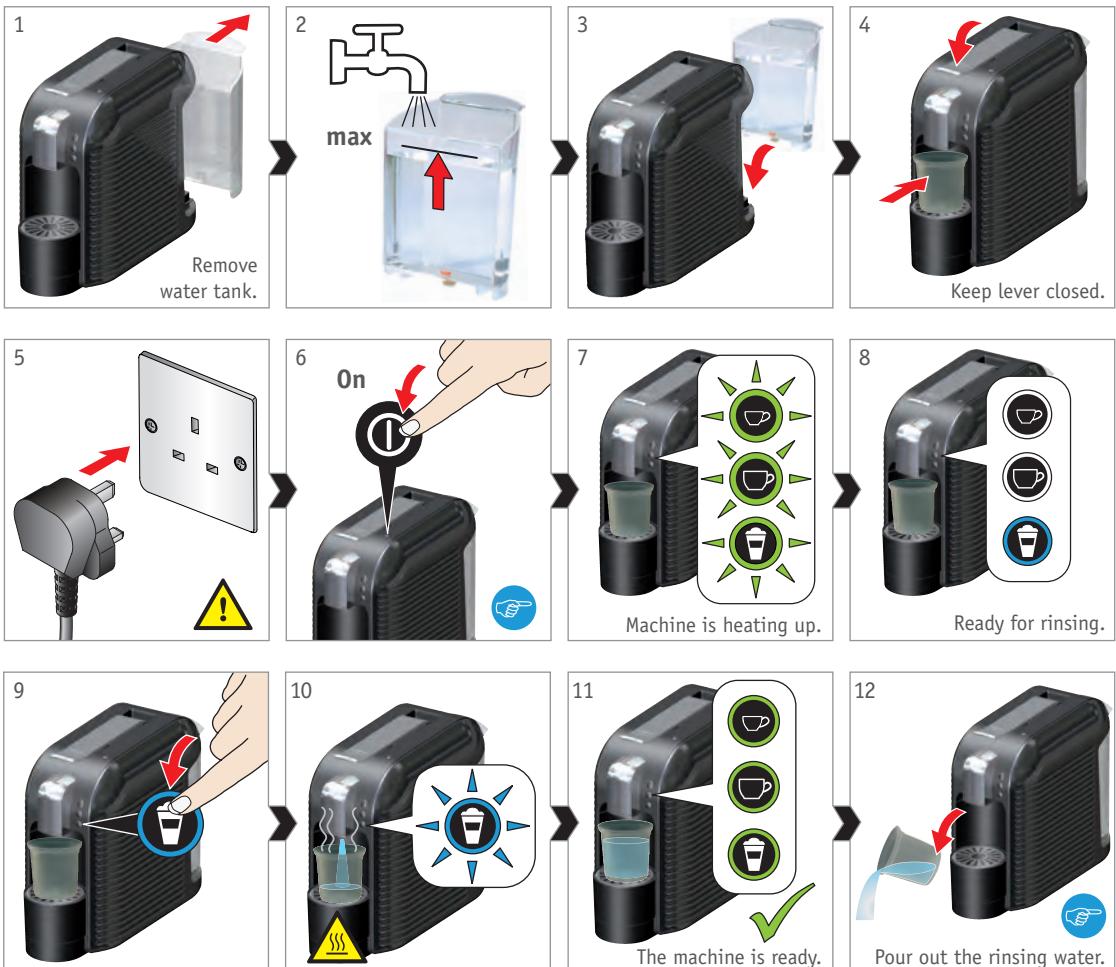

## Start-up

 Before starting up the machine, read the safety instructions on pages 4 to 7.

 If the machine was exposed to temperatures below freezing point, please wait at least 3 hours before starting up the machine so that it can return to room temperature. If the machine is very cold or frozen, it may not function properly.

 **Risk of scalding!**  
Very hot water.

 Before using the machine for the first time, run 5 rinsing cycles. To do that, press the milk/rinse button again after the previous rinsing process has ended. When using a water filter, please read the instructions on page 12.


## Preparing beverages (e.g. Espresso)

 The Quick Start Guide contains information on preparing other beverages.




 The machine automatically switches off if it is not used for 5 minutes. If necessary, use the on/off button to reactivate the machine before preparing new drinks.

 **Risk of scalding!**  
Very hot water.

 The brewing process can be stopped by pressing any button a second time.

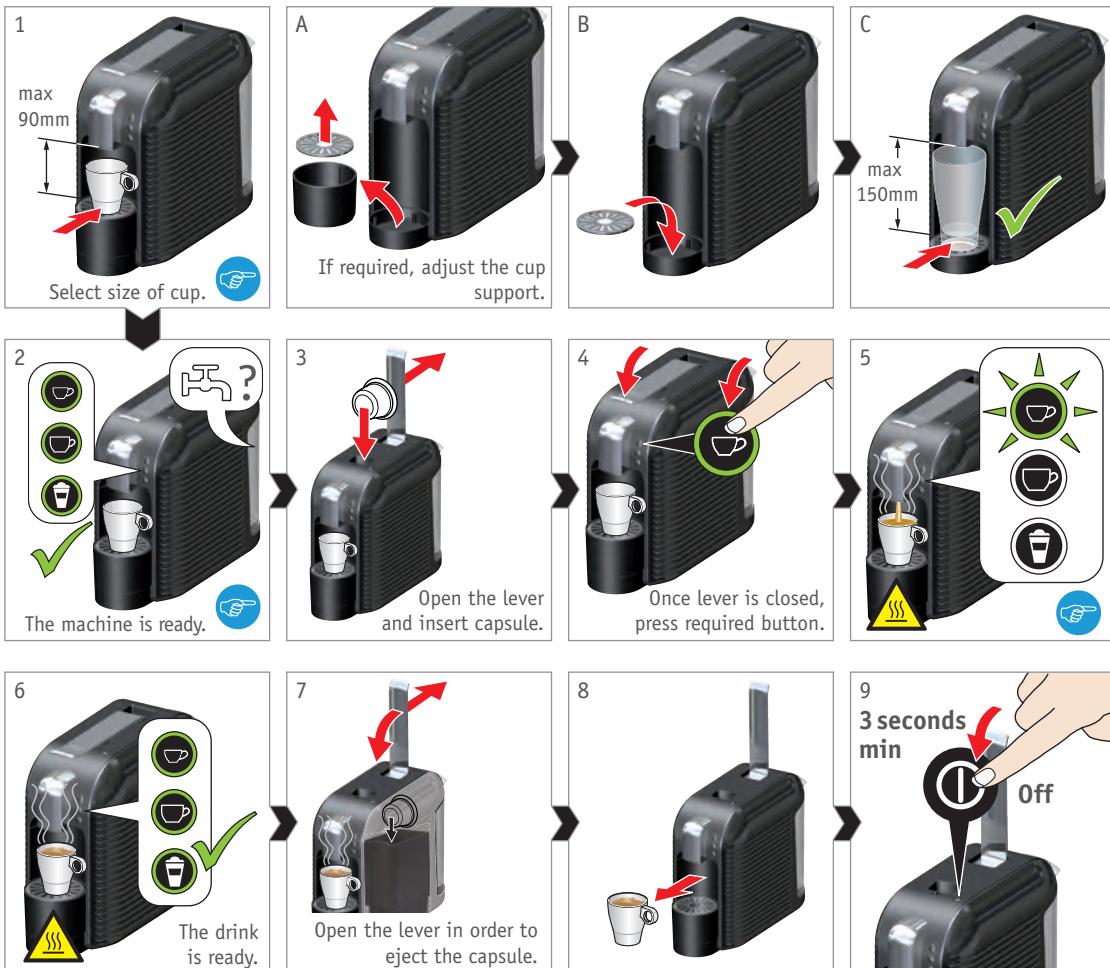

## Programming the cup capacity

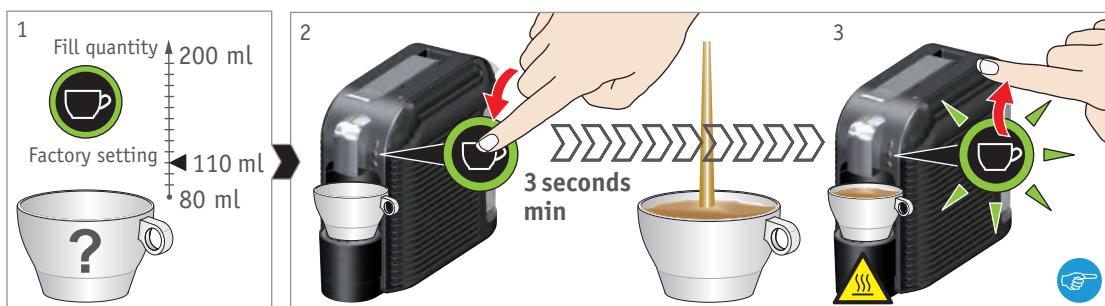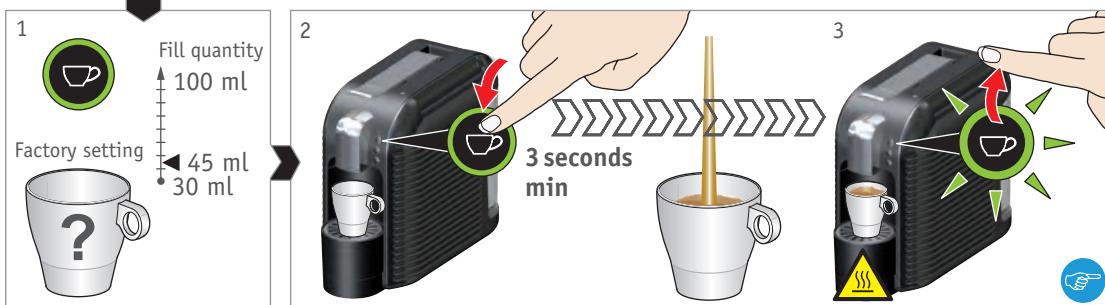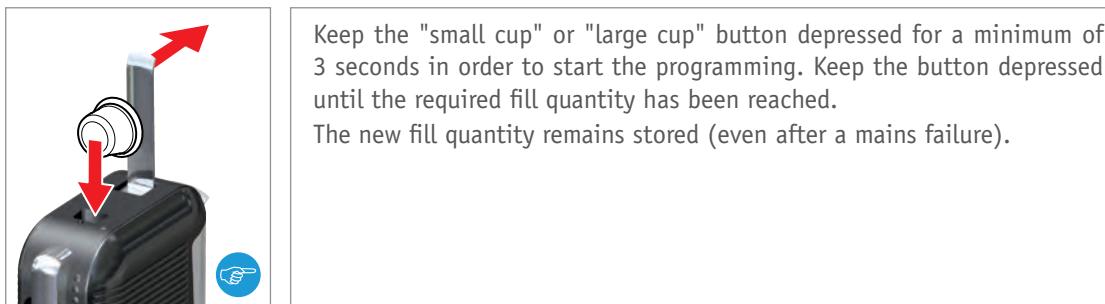

 First insert a capsule before programming the cup capacity.

 **Risk of scalding!**  
Very hot water.


 It is possible to reset the machine to the factory settings. To do this, read the frequently asked questions on page 21.


# Inserting the water filter (not included)

**Safety instruction:**  
Please read the water filter operating and safety instructions carefully. For hygiene reasons change the water filter every 3 months at the latest. Also descale the machine once a year using K-fee® System Descaler.

**Risk of scalding!**  
Very hot water.

 Use the rotary scale to set the month for the next filter change.

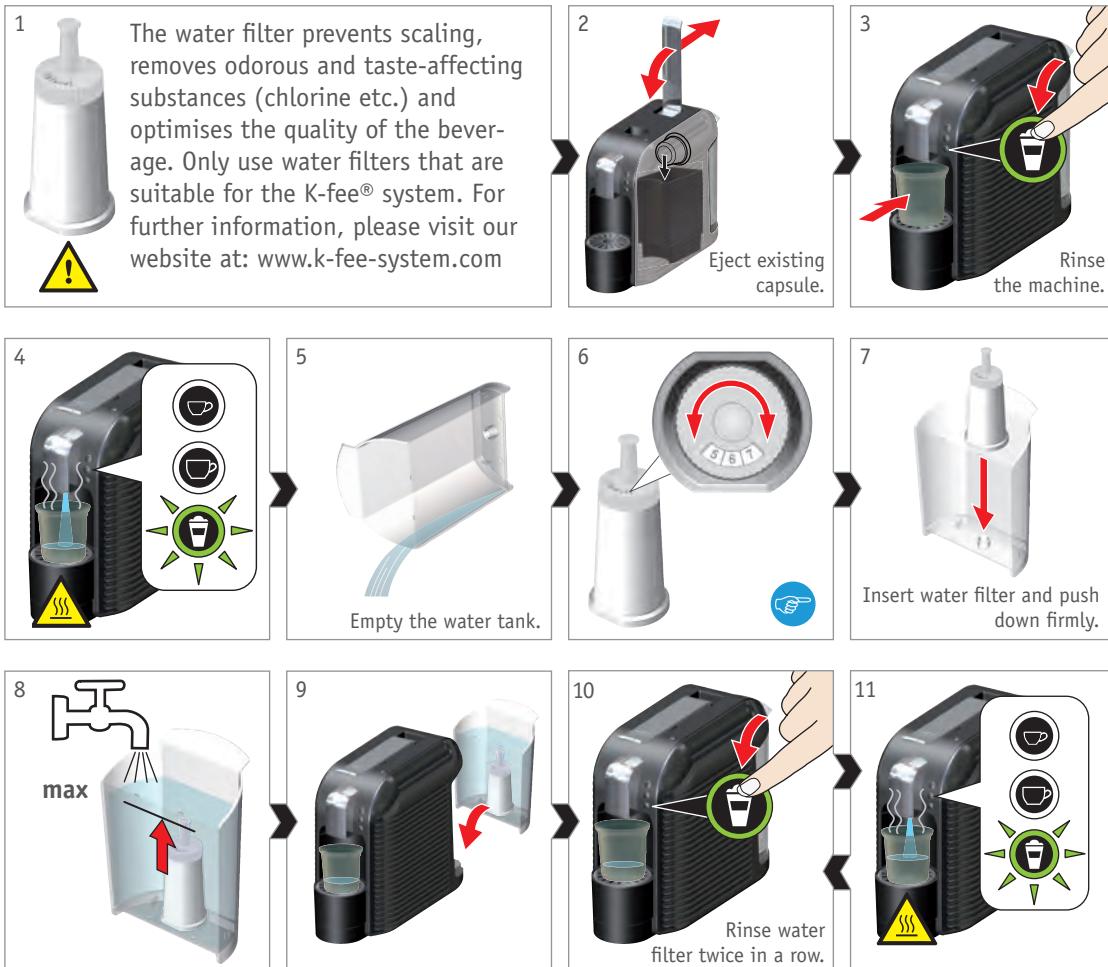


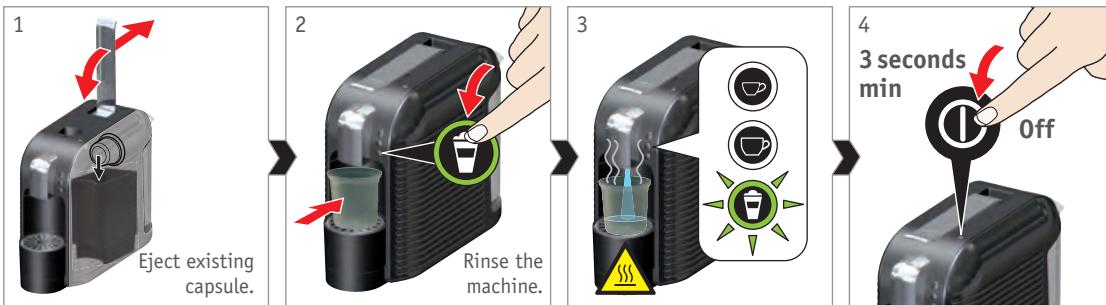

Cleaning the machine (daily or after last use)



**Risk of scalding!**  
Very hot water.

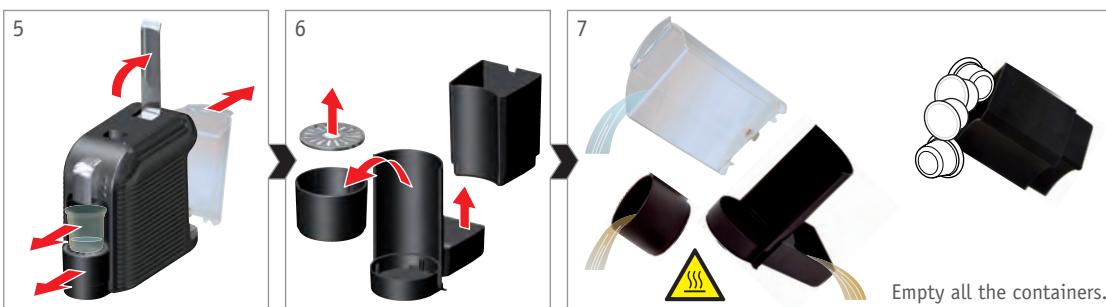

**Risk of scalding!**  
Carefully empty the drip tray and spent capsule container.



#### Danger to health:

If the machine is not used for long periods without prior rinsing or cleaning, deposits may form and they are difficult to remove.



#### Risk of damage!

Only use a damp cloth and a mild cleaning agent (no scouring agents or aggressive cleaning products).  
Do not wash machine parts in the dishwasher.

# Cleaning the machine (every 2 weeks)

For hygiene reasons, we recommend cleaning the machine every two weeks with a cleaning capsule.



**Danger to health:**  
Read the operating instructions for the cleaning capsule carefully and follow the safety instructions.



**Risk of scalding!**  
Carefully empty the drip tray and spent capsule container.




**Risk of scalding!**  
Very hot water.



**Danger to health:**  
Do not drink any cleaning liquid.


- 1 The cleaning capsule is designed for simple, user-friendly cleaning of the capsule and dispensing chamber of the K-fee® system. Only use cleaning capsules that are suitable for the K-fee® system. For further information, please visit our website at: [www.k-fee-system.com](http://www.k-fee-system.com)
- 2 Eject existing capsule.
- 3 Insert new cleaning capsule.
- 4 Empty all the containers.
- 5 Rinse the machine with water until the water is clear.
- 6 Insert new cleaning capsule.
- 7 Open the lever and insert cleaning capsule.
- 8 Dispense hot water into a cup.
- 9 After rinsing once, leave the machine for 2 minutes.
- 10 After rinsing once, leave the machine for 2 minutes.

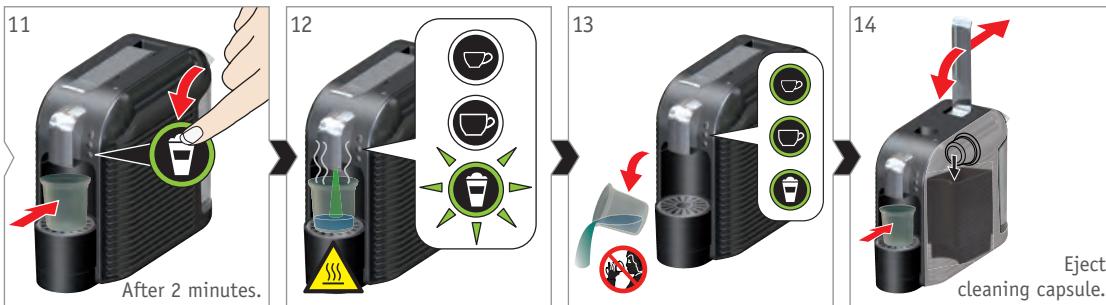

Cleaning the machine (every 2 weeks, continued)



Risk of scalding!  
Very hot water.

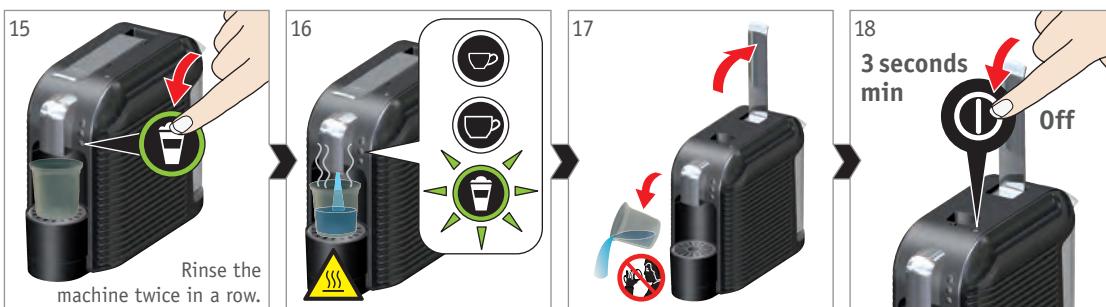

Danger to health:  
Do not drink any cleaning liquid.



## Cleaning the machine (every month, alternative to cleaning capsules)

**Danger to health:**  
Carefully read the operating instructions for the cleaning agent and follow the safety instructions.


**Caution!** Remove the water filter before cleaning.


**Risk of scalding!**  
Carefully empty the drip tray and spent capsule container.

 Repeat the rinsing process (images 7, 8, 9) a total of 8 times.

**Risk of scalding!**  
Very hot water.

**Danger to health:**  
Do not drink any cleaning liquid.

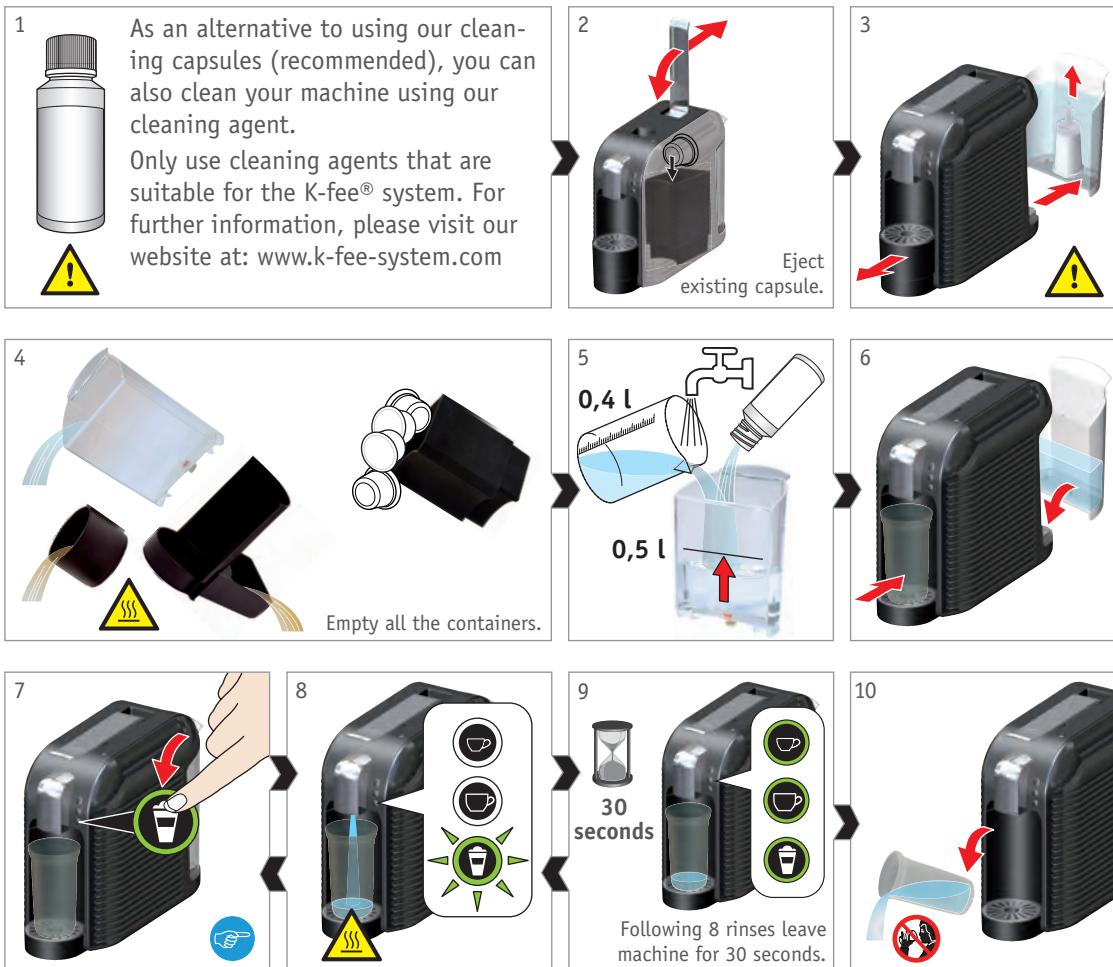


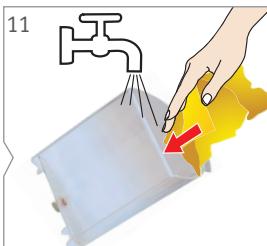

Thoroughly rinse and clean the water tank.



Reinsert the water filter (optional).

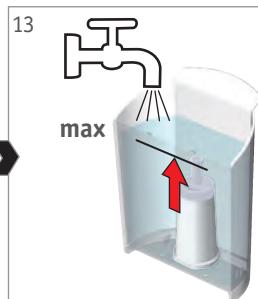

max




Cleaning the machine (every month, continued)



Rinse machine 4 times in a row.



Risk of scalding!  
Very hot water.

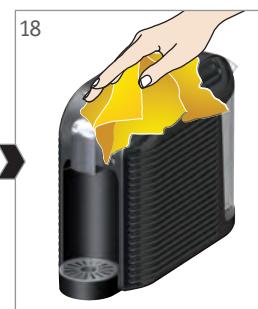

## Descaling the machine (every month)

**Danger to health:**  
Carefully read the operating instructions for the descaling agent and follow the safety instructions.

**Caution!** Remove the water filter before descaling.


**Risk of scalding!**  
Carefully empty the drip tray and spent capsule container.

 Repeat the rinsing process (images 7, 8, 9) a total of 8 times.

**Risk of scalding!**  
Very hot water.

**Danger to health:**  
Do not drink any cleaning liquid.




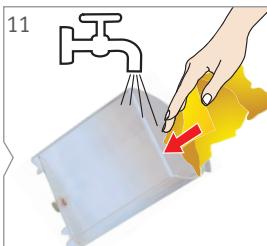

Thoroughly rinse and clean the water tank.



Reinsert the water filter (optional).

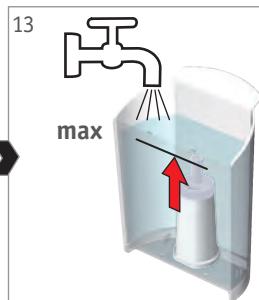

max



14




Rinse the machine 4 times in a row.



3 seconds  
min

Off

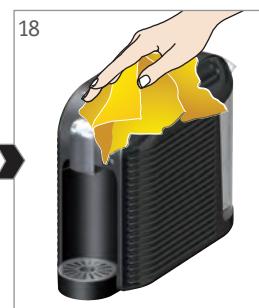

18



If no water filter is used, descale the machine every month in order to maintain optimum function.

When using the machine with a water filter, to ensure optimum function, we recommend it be descaled once a year.

## Descaling the machine (every month, continued)



**Risk of scalding!**  
Very hot water.

## Frequently asked questions



The machine will only work with capsules marked with the K-fee® system logo.

### Why is the drink dispensing process delayed?

The machine is re-adjusting the temperature for the requested drink.

### Is the spent capsule container overfull and jammed?

Try to remove the spent capsule container by jogging the container gently to and fro.

### My drink is not hot enough, what can I do?

Preheat the cup. If necessary, descale the machine – see the "Descaling the machine" section.

### Why does the button light up blue?

The milk/rinse button lights up blue when the machine is switched back on after a long period without use (about 30 minutes). Press the milk/rinse button to rinse the machine. The machine is then ready to prepare beverages.

### Why are the "small cup" and "large cup" buttons flashing rapidly?

Switch the machine off and remove the plug from the mains supply. If the problem persists, please inform Customer Service.

### Why is the drink not dispensed properly?

Push the lever fully down. If necessary, descale the machine – see the "Descaling the machine" section.

If the water tank becomes empty while drinks are being dispensed and the pump runs dry:

- Press any button to stop the brewing process.
- Open the lever to eject the spent capsule and close it again.
- Then fill up the water tank and replace it in the machine.
- Rinse the machine until water comes out of the spout.
- Now you can start again with a new capsule.

## Frequently asked questions (continued)

### Why do I have to descale the machine if I am using the water filter?

If the water filter is regularly changed, no descaling is necessary. Nevertheless, it is possible that mineral deposits occur depending on the water quality and the machine location. For this reason we recommend an annual cleaning / rinsing process using a K-fee® System Descaler.

### Why does the machine suddenly switch off during a period of intensive use?

If the cooling-down period is too short, the machine switches itself off as protection against overheating. The milk/rinse button flashes blue while the other two buttons flash green (approx. 1 minute). The machine is then ready to operate again.

### Why does the machine switch itself off?

The machine switches off automatically if it is unused for more than 5 minutes. Please remember that the machine uses power as long as it is plugged in the mains socket (< 0.5 W).

### How do you reset the machine to the factory settings?

Switch the machine off using the on/off button. Press the "small cup" and "large cup" buttons at the same time and switch the machine back on. The milk/rinse button lights up once again as confirmation.

## Specifications

	220 to 240 V ~, 50 Hz, max. 1455 W
	1 m
P pressure	max. 19 bar
	1 l
	3.8 kg
	A = 150 mm B = 378 mm C = 297 mm
	max. 150 mm
	10°C - 45°C
	~ 90°C

## Service

If you have any questions or suggestions, please contact us on [www.coffeecentralclub/contactus](http://www.coffeecentralclub/contactus)

You will find the warranty conditions on the [www.coffeecentralclub.co.za/machinewarranty](http://www.coffeecentralclub.co.za/machinewarranty)

With this function, any residual water in the machine is evaporated and removed. This prevents any residual water from freezing in the machine when the machine is transported or stored at temperatures below freezing point.

### **CAUTION**

 Extreme temperatures may cause damage to the machine (permitted operating temperature 10°C - 45°C). For this reason the machine

- must be protected against frost,
- must not be used at temperatures below 10°C,
- must not be used at temperatures over 45°C.

### **Procedure**

- If necessary, warm up the machine until it reaches room temperature.
- Open and close the lever in order to eject any existing capsule.
- Take out and empty the water tank.

- Ensure that the machine is switched off.



### **WARNING**

Risk of scalding! The evaporation process results in hot steam (up to 120°C) and hot water.

Do not reach under the spout and maintain a safe distance from the spout.

- Depress the "small cup" and the milk/rinse button at the same time. Now press the on/off button. Evaporation starts and the "large cup" button flashes green.
- After the evaporation process the machine switches off automatically.
- Reinsert the empty water tank.
- Empty and dry the drip tray and spent capsule container.
- Use a dry cloth to wipe the front of the housing.

The packaging is recyclable. Ask the responsible authorities in your local council offices for further information about recycling.

Environmental protection has priority!



The machine is made of valuable materials that are recyclable.

 The machine bears the sign for waste electrical and electronic appliances in accordance

with European Directive 2002/96/EC (WEEE). This directive regulates the return and recycling of waste appliances within the EU. For this reason, only dispose of the machine at a public recycling yard in your vicinity. The machine must not be disposed of in the normal domestic waste.

## **Evaporating the residual water**

## **Disposal instructions**

